


POLYKEN FILLER TAPE


TWO LAYERS OF POLYKEN JOINT WRAP TAPE

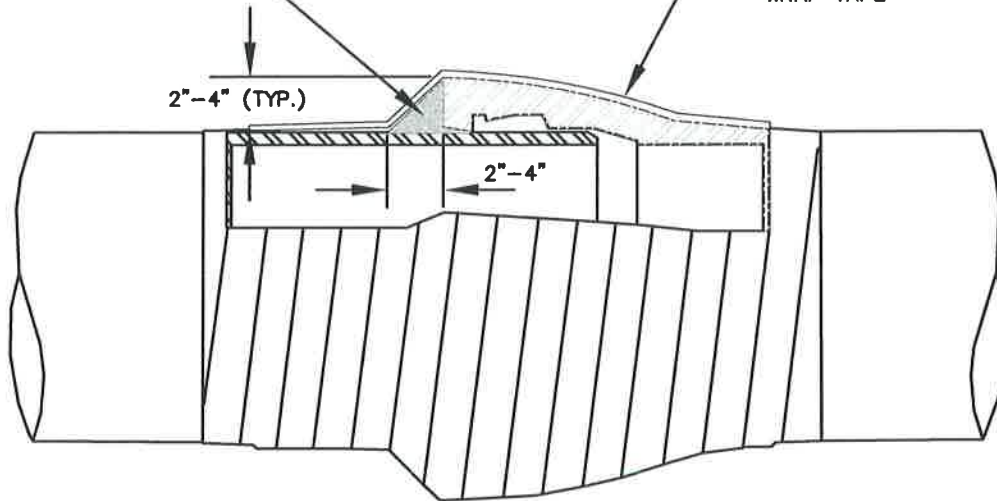

BELL AND SPIGOT JOINT

POLYKEN FILLER TAPE

TWO LAYER OF POLYKEN JOINT WRAP TAPE

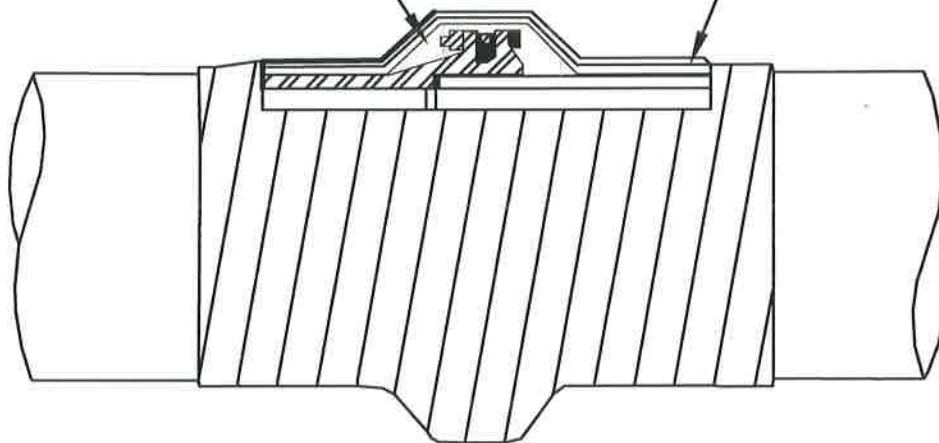

MEGALUG JOINT

NOTES:

1. CLEAN JOINT OF ALL FOREIGN MATERIAL BY WIRE BRUSHING.
2. APPLY COATING PRIMER TO JOINT.
3. INSTALL FILLER TAPE AS SHOWN, AND FILL ALL VOIDS BETWEEN FLANGES AND BOLTS.
4. APPLY TWO LAYERS OF JOINT WRAP TAPE.
5. COAT PIPE FITTINGS IN A SIMILAR MANNER.
6. HEAT SHRINKS SLEEVES WITH FILLER MATERIAL AS RECOMMENDED BY HEAT SHRINK SLEEVE MANUFACTURER MAY ALSO BE USED.

WASHINGTON
SUBURBAN
SANITARY
COMMISSION

APPROVED: _____

8/12/16

Chief Engineer

STANDARD DETAIL
JOINT COATING
DETAIL

C
6.0